

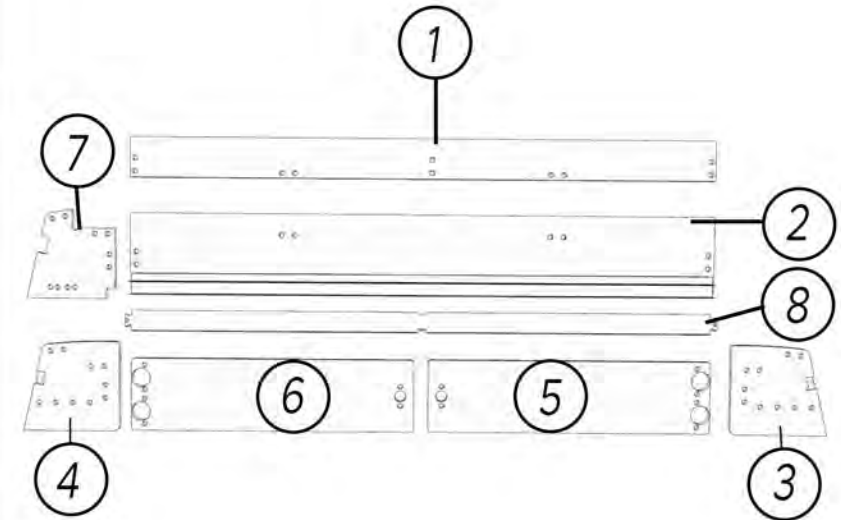





Side Locker

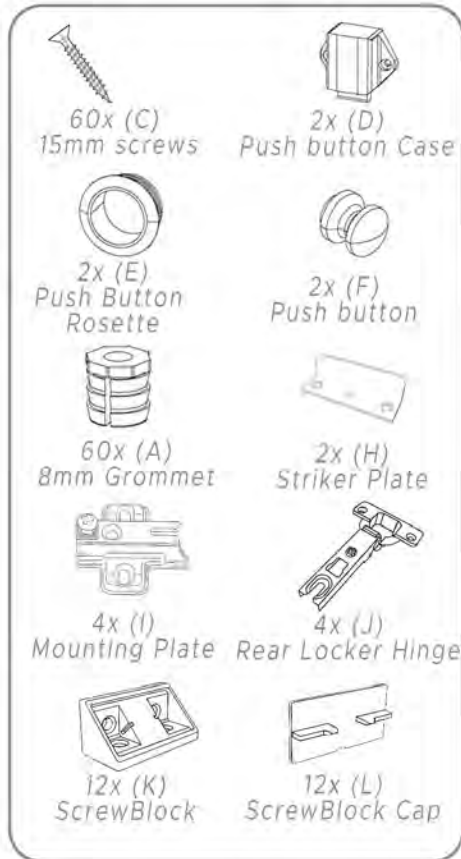

1.

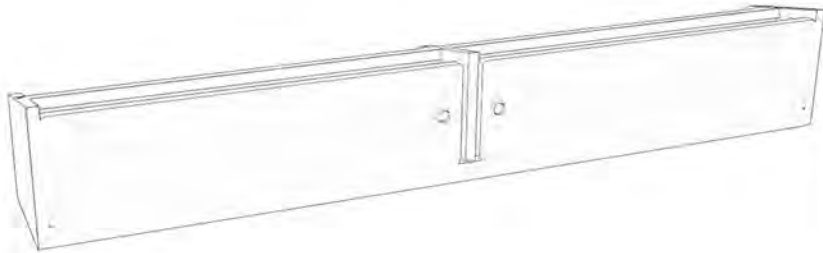


All pieces should have T-Trim applied before assembly!

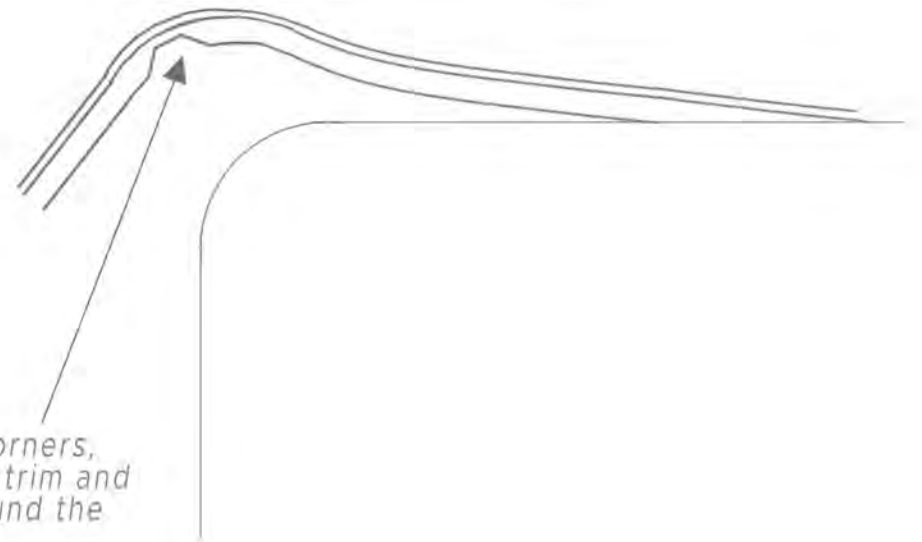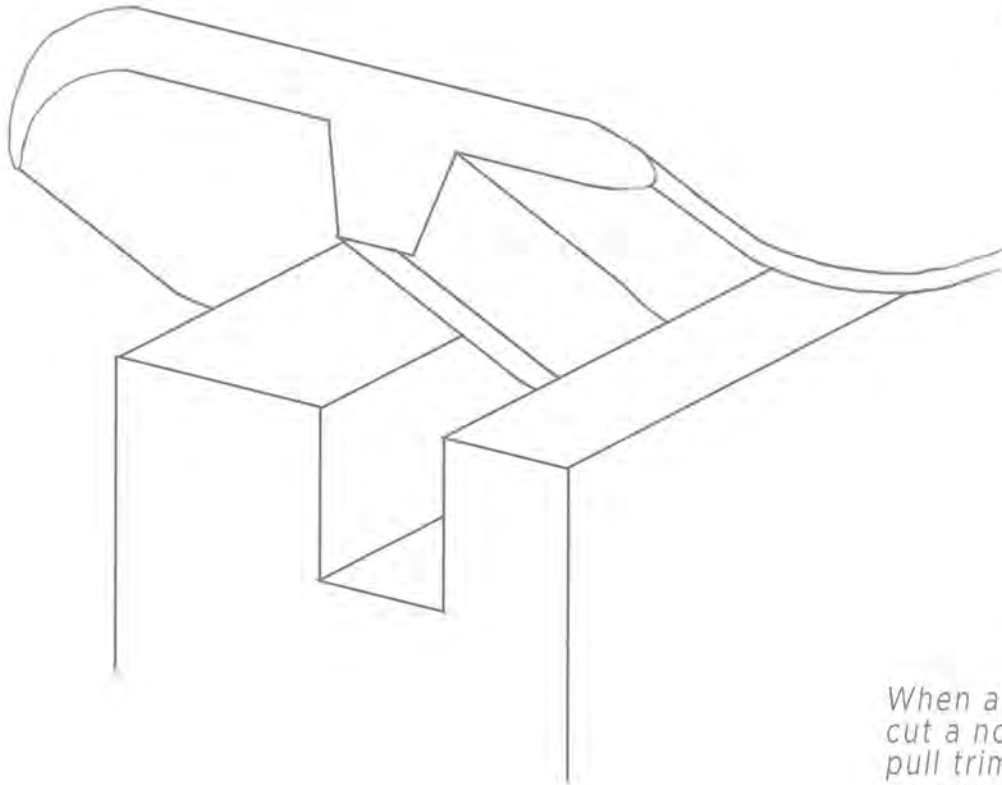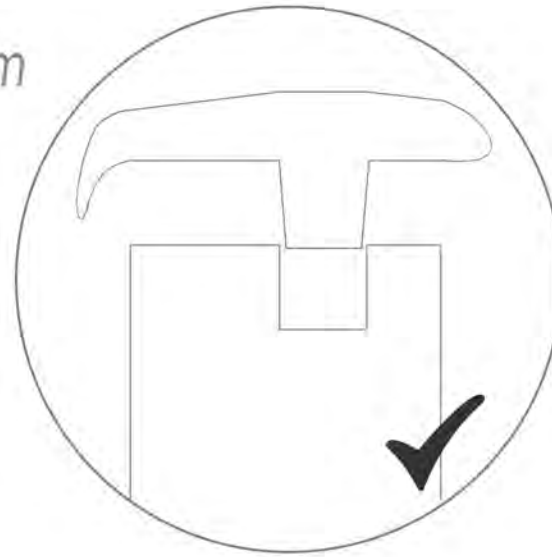


When applying to corners, cut a notch into the trim and pull trim tightly around the corner.


2.

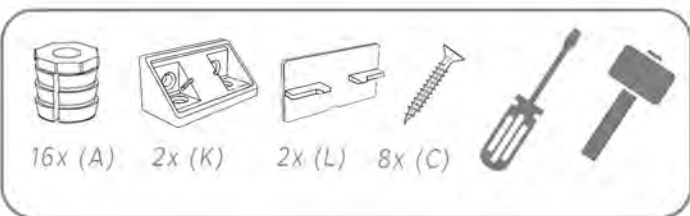


2.c

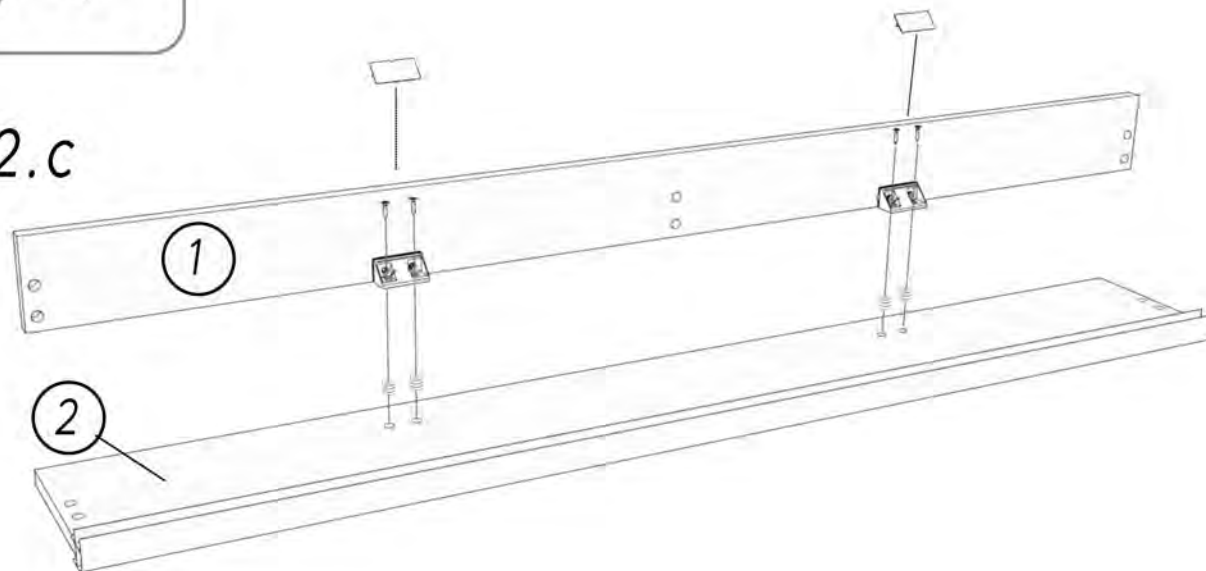


2.a

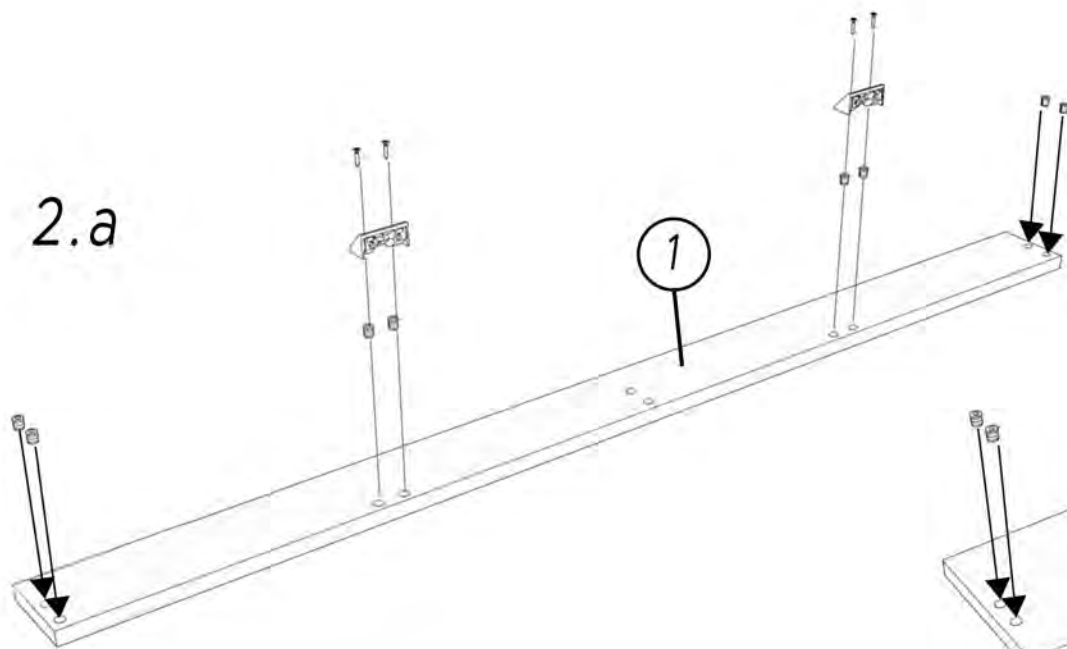


2.b

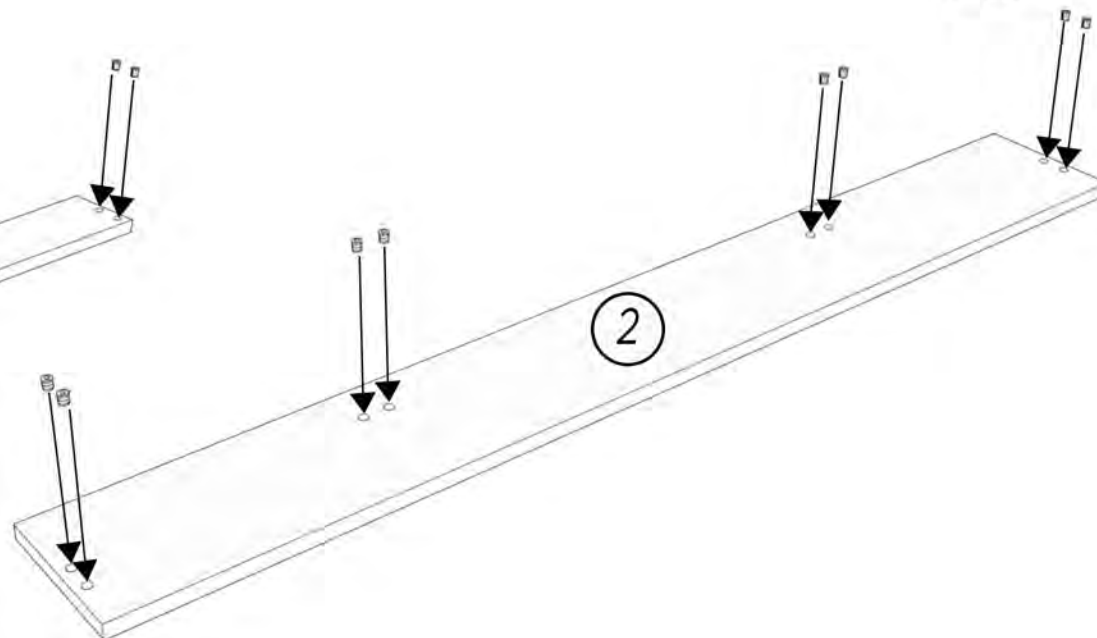


3.

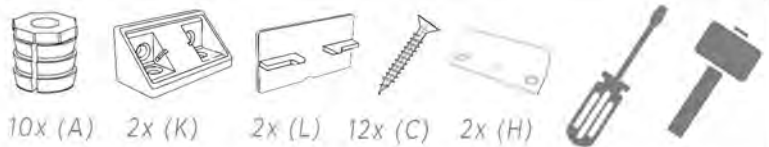


3.a

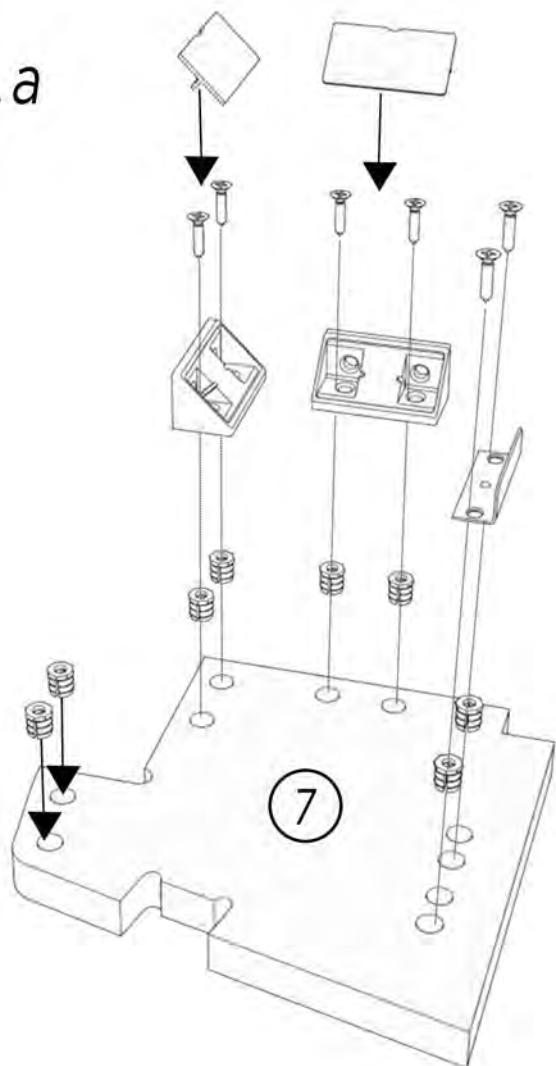


3.c

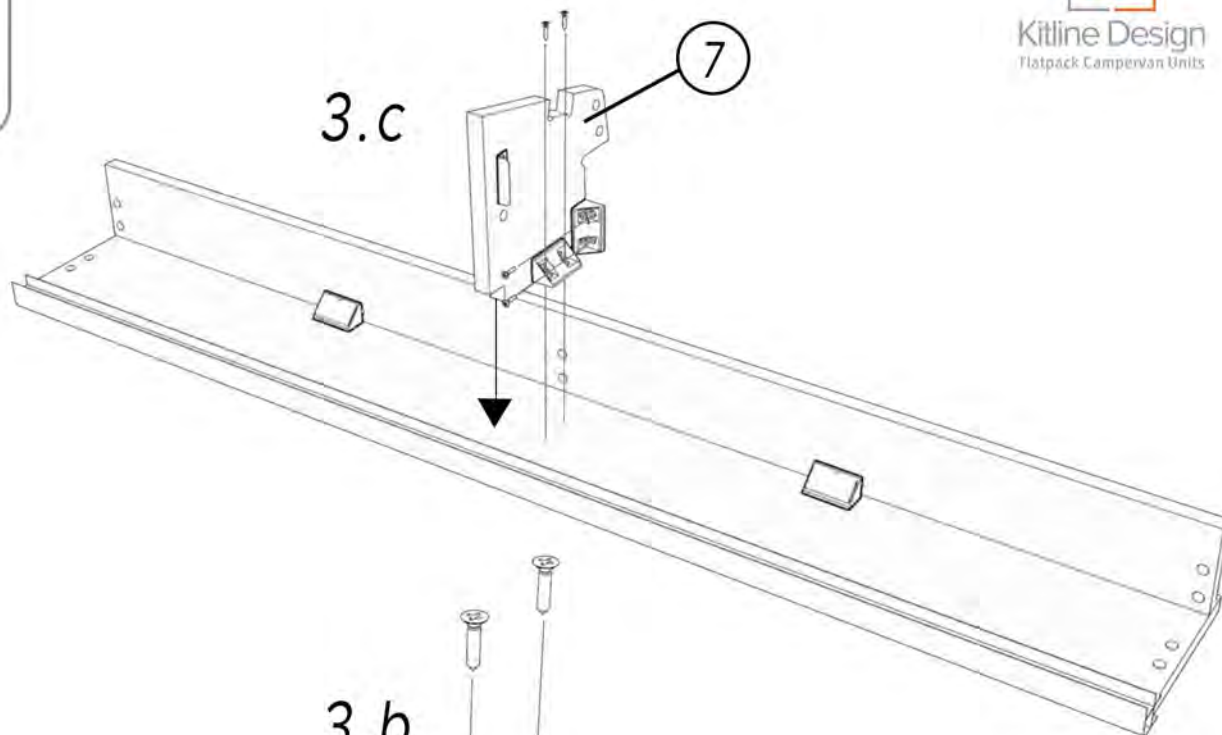


3.b

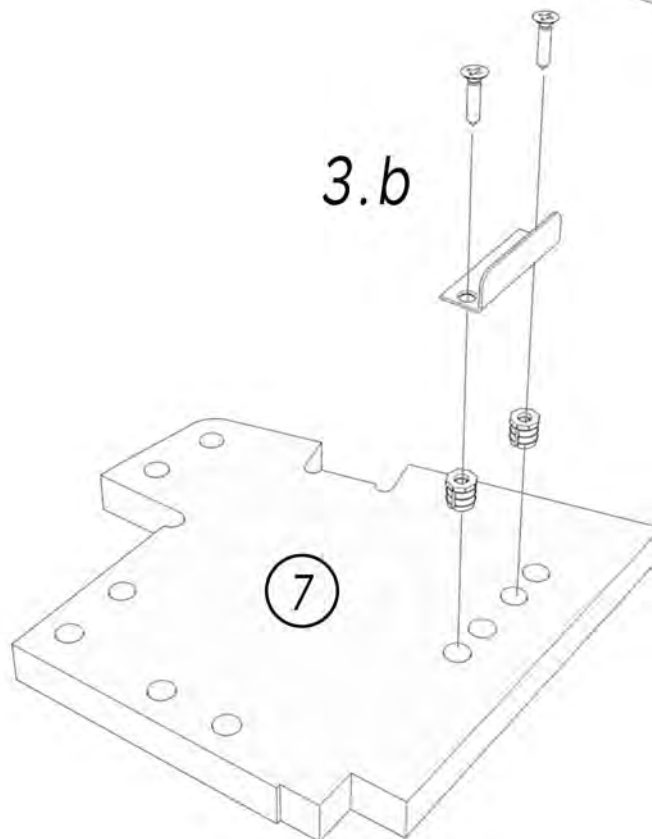


4.

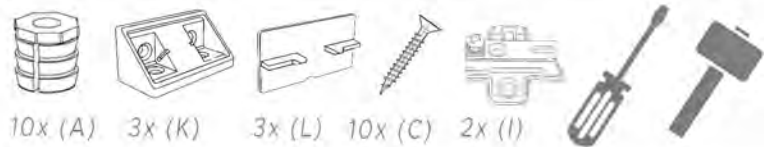


4.a

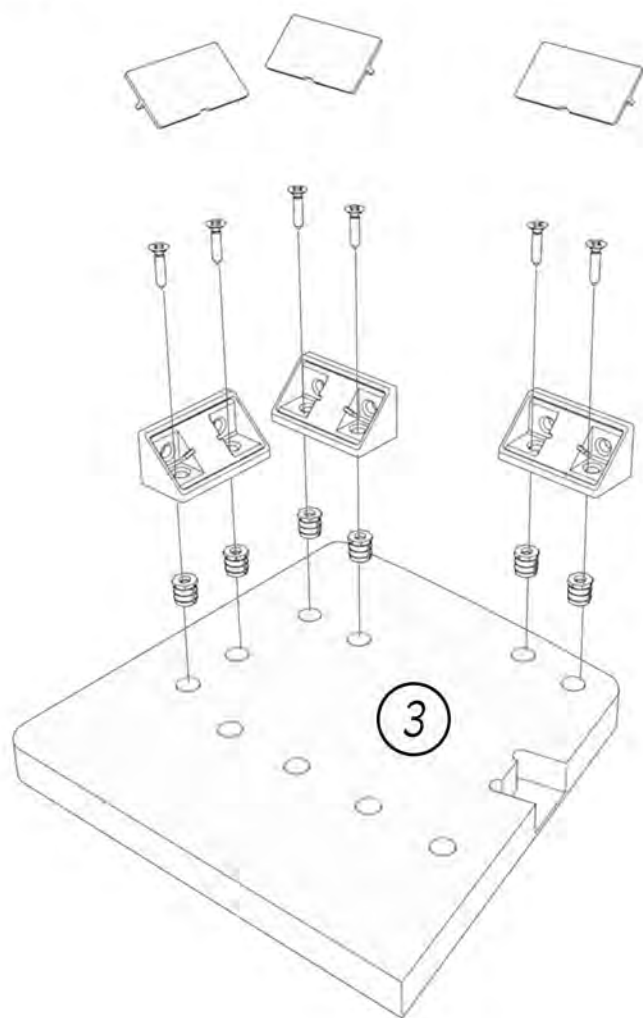

4.c

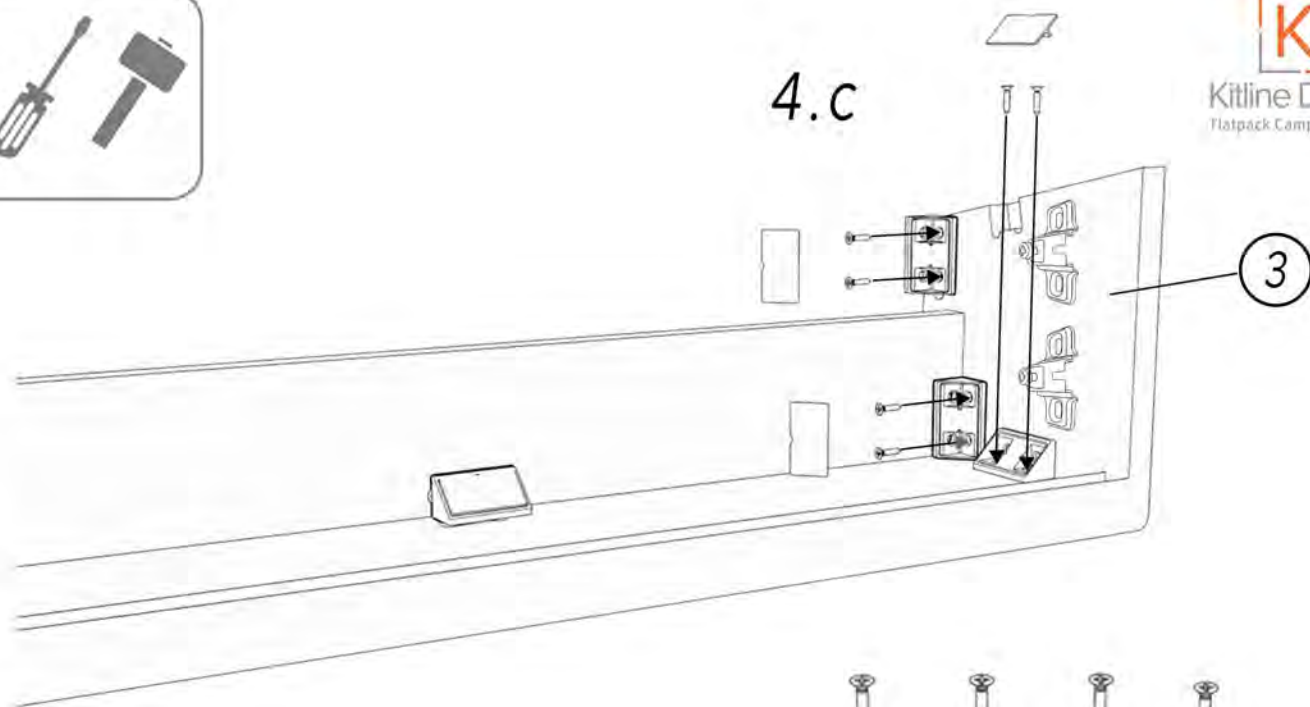

4.b

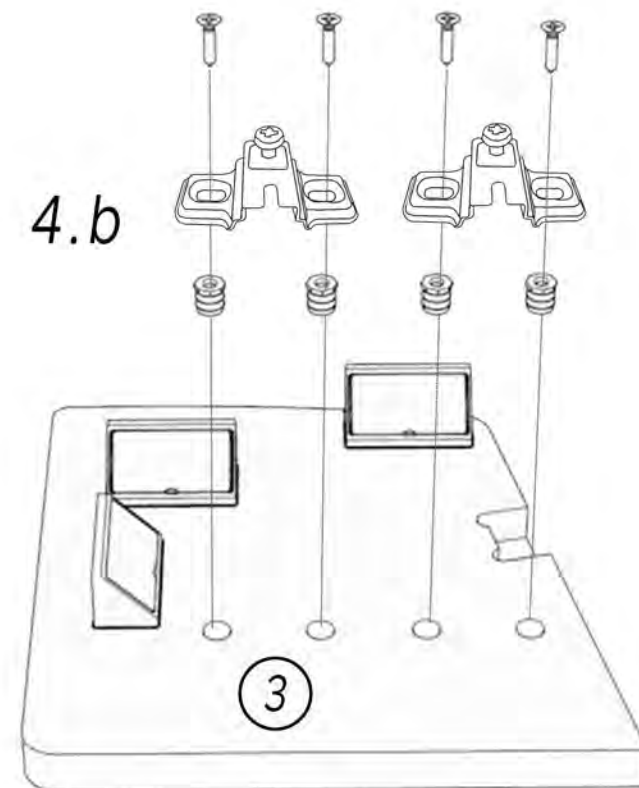

Kitline Design
Flatpack Campervan Units


5.



10x (A)



3x (K)



3x (L)




10x (C)



2x (I)




5.a

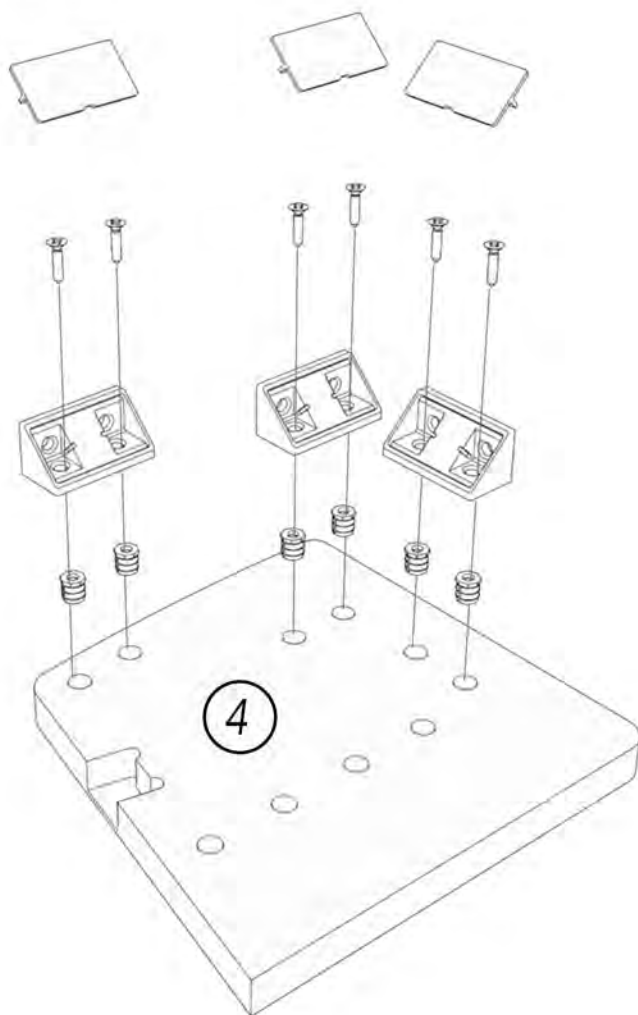


5.c

4

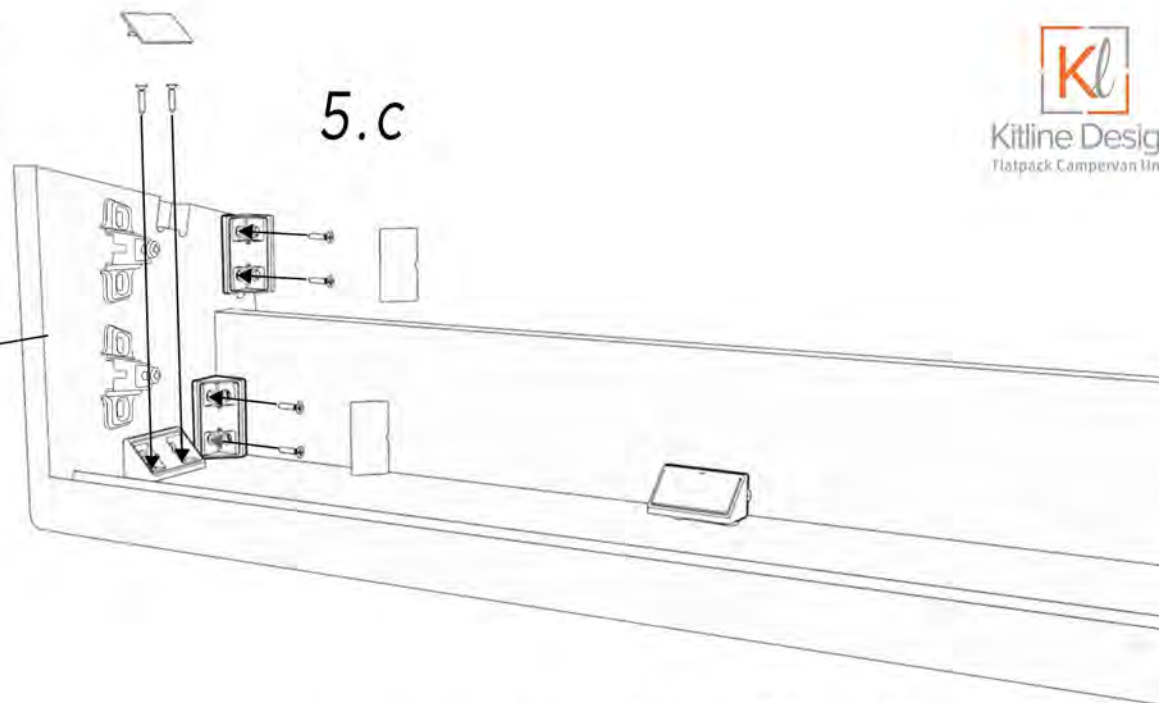

5.b

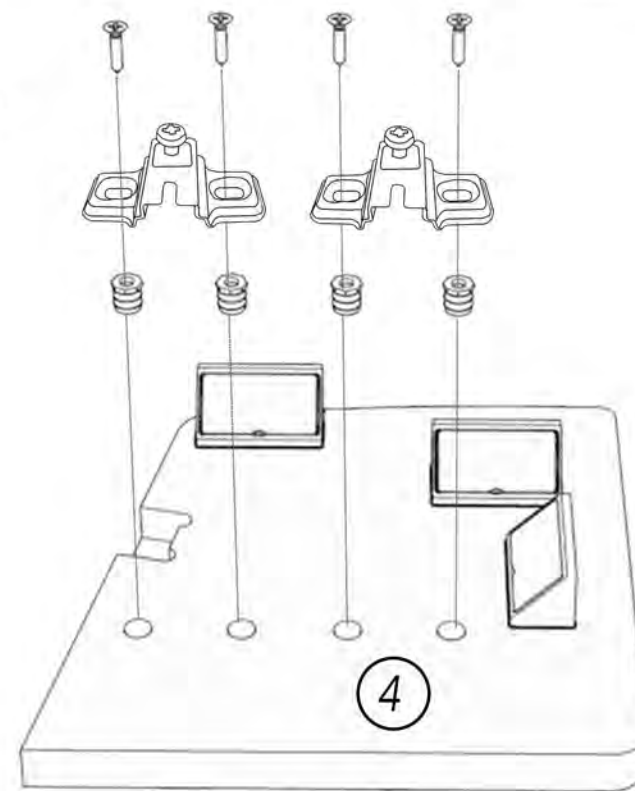

6.



12x (A)



2x (D)



2x (E)



2x (F)




12x (C)




4x (J)




6.a

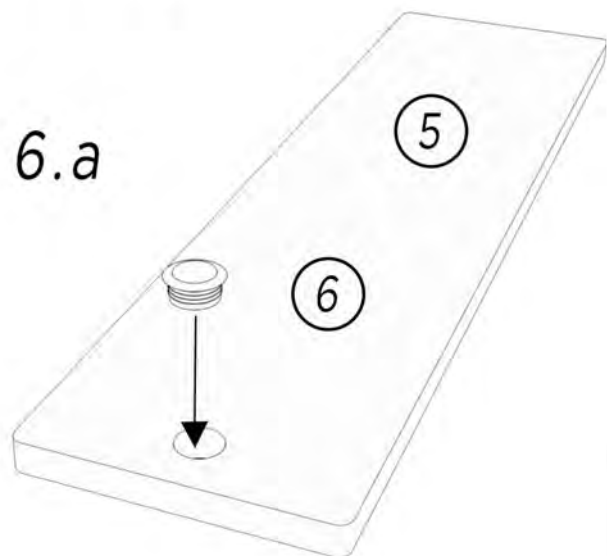


6.b

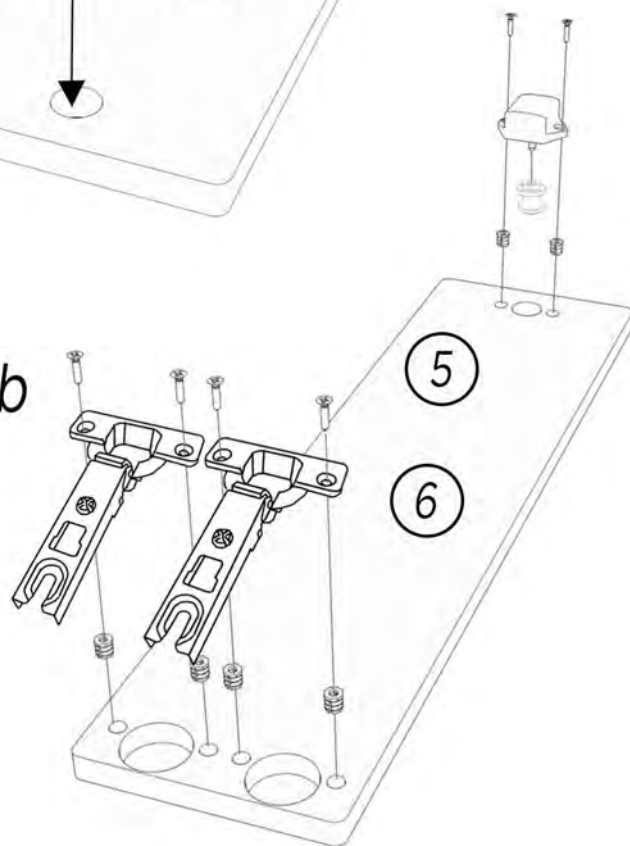

6.c

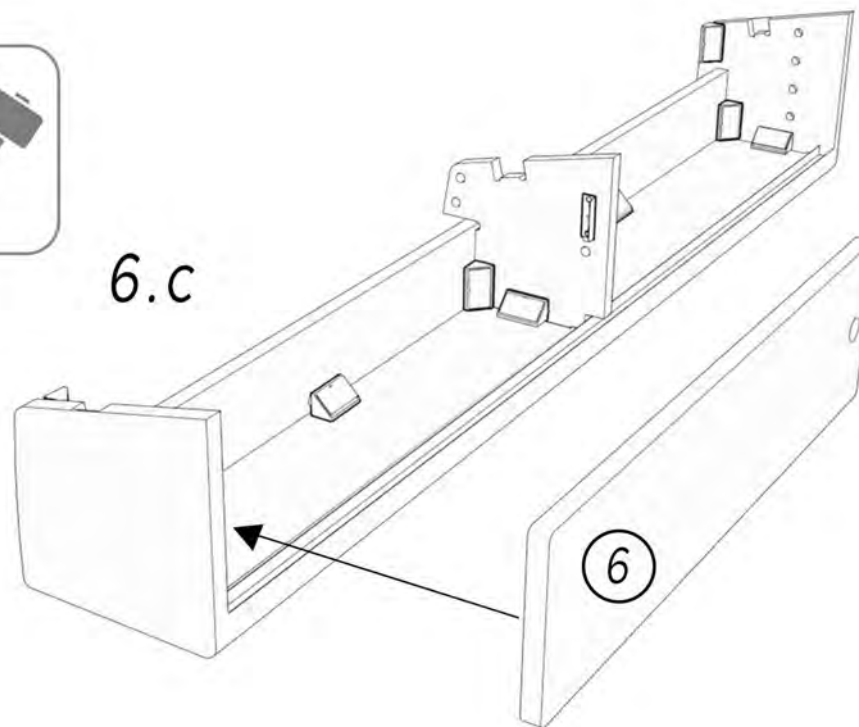

6.d

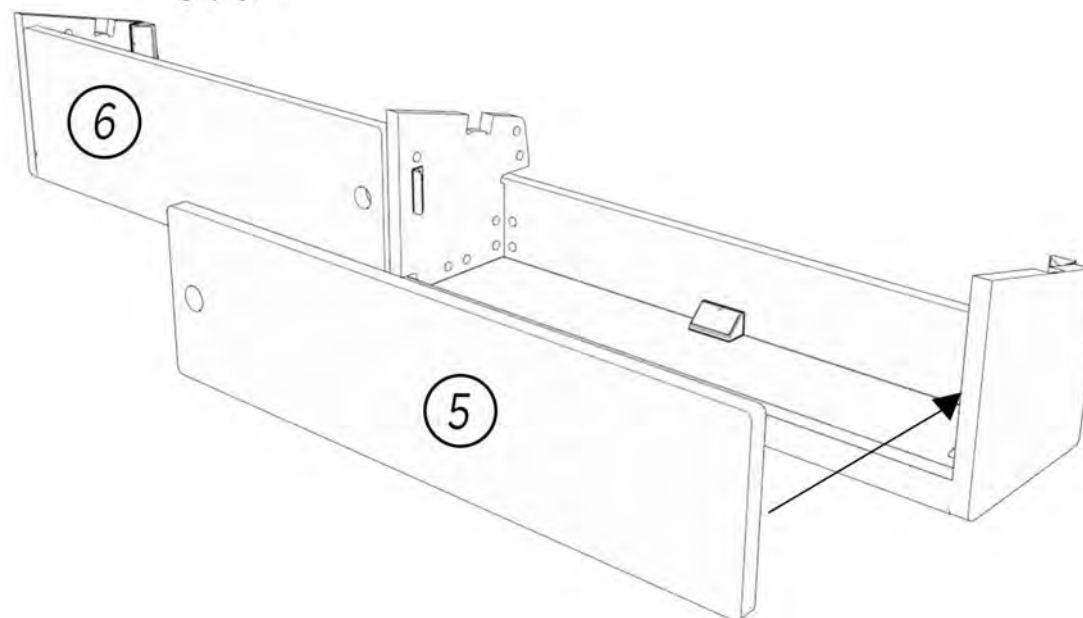

Kitline Design
Flatpack Campervan Units

7.

